



TV bed
ASSEMBLY INSTRUCTIONS





There are four outer packs containing the following:

- Pack 1:** Headboard including beech slats
- Pack 2:** Footboard including TV, lift and cabling, power cable for TV, HDMI and scart cables for equipment tray and aerial cable.
- Pack 3:** Side rails, centre support rail and centre supporting legs
- Pack 4:** Equipment tray, power cable for lift, control unit, TV instructions and remote control, plastic end caps and assembly screws.



Assembling the frame

- 1 Partially screw the four screws into the fixing holes at either end of the headboard and footboard.
- 2 Join the headboard to the siderail with the equipment tray slot, and tighten the screws with the allen key provided (see below), ensuring that the actuating button is at the headboard end of the siderail.
- 3 Join the footboard to the assembled unit in the same way (see right). Please note: It is important to lift the TV flap and remove all packaging from the lift mechanism before operation.
- 4 Finally, fit the other side rail and tighten all screws (see below right).



Fitting the centre support

Screw the three short adjustable legs into the centre support bar and drop the assembled unit into the supports in the head and foot of bed frame. Adjust the base of the three legs so that they reach the floor.



Fitting the equipment tray

Partially screw the two screws into the fixing holes at either end of the equipment tray. Drop the tray into position on the side rail and tighten the screws with the allen key provided.



Electrical connections

1. Connect the red phono plug from the footboard to the red phono socket on the control box.
2. Connect the two black phono plugs from the two side rails to the two black operate sockets on the control box.
3. Connect the TV power lead from the footboard to the TV power socket on the control box.
4. Connect the 3m power lead to the power socket on the control box and connect to mains power source. When power is connected the control box will emit a beep.
5. Test the lift function on both side rail operate buttons.



Fitting the beech slats

Assemble each pair of beech slats with two plastic end caps and one centre cap and snap the into the holes provided in the side rails and centre support, ensuring each slat is fully snapped into position in the rails.





Operation

On initial power of the control box a single beep confirms power is connected.

For normal operation, press either button once and lift will operate, as TV rises TV power will turn on. From up position press either button and TV will lower and power will be cut to TV.

Lift can be halted in any position whilst in operation with a single press on either of the lift operation buttons. A subsequent press will re start the lift.



Child Lock Facility

To set the child lock, press and hold either button. After two seconds control box will beep, continue to hold button for approx eight seconds until beeping sound ceases. Child lock is now in operation.

Any subsequent presses of button, a single beep will confirm that child lock is active and the lift will not operate.

To unset child lock, hold down either button for eight seconds. Control box will beep once and lift mechanism will return to normal operation.

Lift should not be operated when small children are near the lift. Child lock should be in operation if unsupervised children are allowed access to bed.

Maintenance

Leather is a natural product. It breathes, is warm and has individual characteristics, which makes each hide unique. Leather will always display traces of its origin such as brands, scars, creases and growth. These hallmarks add character to the bed and do not affect the wearing qualities of the product. Leather is highly resilient, durable over time and develops a patina that increasingly enhances its appeal.

- Always protect your bed from direct sunlight as this may accelerate the natural ongoing discolouration process.
- If you spill something, act quickly to mop and blot liquid with a clean white cloth. Do not use detergents and do not rub. In the event of a stain, please consult a professional cleaning company.
- Clean all parts of a bed together, as slight colour changes can sometimes occur.
- Screws holding together the bed frame should be tightened regularly.

Trouble Shooting

Poor picture?

Please check the quality of your TV signal. The TV provided with the bed requires a strong signal.

TV will not lift?

Please check all wires are correctly connected as illustrated in the instructions. The control box emits a beep when initially powered, please make sure this is the case.

TV will not work?

Please check the power to the TV.

TV switch works on one side only?

Please check the two wires coming from the side rails are connected to the control box.

How to contact us

Please contact us directly on 01621 851987 if you have further questions.

